




Every™ Service. INSITE.™

Service And Diagnostic Software

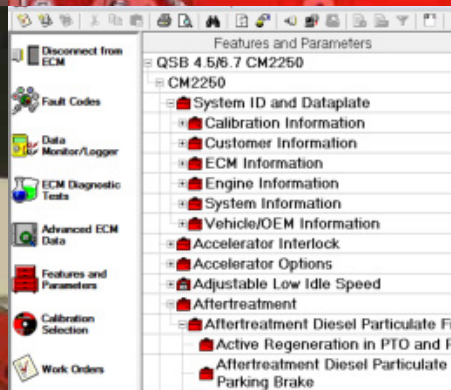

More Uptime. Every™ Time.

INSITE™ is a PC-based software application that provides quick and easy access to your engine's electronic performance information. This enables faster service turnaround times. INSITE helps ensure accurate diagnoses and limits downtime while increasing productivity and profits.

Cummins INSITE software supplies engine information quickly, getting the inside details you need. No matter what kind of equipment you run, INSITE is the one support product to have in your virtual toolbox to fit every Cummins electronic engine.

Delivering Every Detail.

INSITE can provide your business with:

- Trip and vehicle information
- Parameter and feature adjustment
- Complete wiring diagrams and sensor location maps
- Fault-related information
- Fault code and symptom-based diagnostics
- Engine diagnostic tests
- Tools to create templates for a group of vehicles
- Audit trail information
- Enhanced Electronic Control Module (ECM) security
- Work orders
- Built-in help
- Calibration downloads
- Graphical monitoring
- Server-based licensing for better security
- User Manager feature

A Version To Meet Every Need.


INSITE is offered at five functional levels: Simulator (new for INSITE 8.0.0), Basic, Lite, RSGR/Industrial Pro and Pro, ranging from a “read only” access level for the do-it-yourselfer to full-function access and capability for the service professional.

In addition to the functional levels, product level licensing is now offered at each of the functional levels. Within each functional level, the options offered are Service Plus, MidRange/Heavy-Duty (MR/HD) Plus, or MR/HD Automotive Only.

Beginning with INSITE 8.0.0, INSITE will require an internet connection to validate licensing every 90 days. No licensing is required for INSITE Simulator.

INSITE Lite, INSITE RSGR/Industrial Pro and INSITE Pro are subscription programs, with automatic shipment of new software releases available through Cummins Inc. Update Manager. This provides subscribers with the latest in features, functions and new engine support. INSITE Basic is offered as a one-time purchase without updates.

All INSITE applications require an adapter to communicate with your engine. We highly recommend using a Cummins INLINE adapter for better performance with Cummins engines. The INLINE adapter translates communications between the INSITE software on your PC and your engine's ECM. See insite.cummins.com for minimum computer hardware requirements.

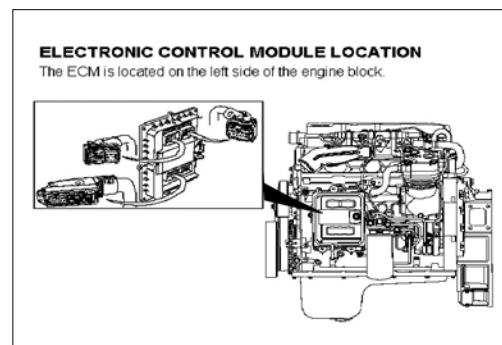

FUNCTIONALITY LEVEL	SIMULATOR <i>No License Required/ No Live ECM Connection</i>	BASIC <i>Read Only ECM Access</i>	LITE <i>No Calibration Download</i>	RSGR/ INDUSTRIAL PRO <i>No Calibration Download/Limited Special Features and Diagnostic Tests</i>	PRO <i>Full Functionality</i>
Features					
View Trip Information		X	X	X	X
View Fault Trees		X	X	X	X
Fault Information System		X	X	X	X
View Troubleshooting Steps		X	X	X	X
View Parameter Settings		X	X	X	X
View Wiring Diagrams		X	X	X	X
View Engine Dataplate		X	X	X	X
Driver Rewards		X	X	X	X
Data Monitor/Logger		X	X	X	X
Reset Trip Information			X	X	X
Reset and Clear Fault Codes			X	X	X
Set Engine Features (on/off)			X	X	X
Set/Adjust Parameters			X	X	X
Set/Change ECM Passwords			X	X	X
Create Settings Templates			X	X	X
Create Work Orders/Jobs			X	X	X
ZAP-It Functionality			X	X	X
Run Special Features			X	Limited	X
Run Diagnostic Tests			X	Limited	X
Read/Retrieve Calibration Files				Industrial/HHP Products Only	X
Load Engine Calibrations				Industrial/HHP Products Only	X

Every™ Question. Answered.

To determine which INSITE level your business needs, or to obtain an INLINE adapter, contact your local Cummins distributor. Additional information is available on our web site at insite.cummins.com.